



Артикул

| Обозначение | дефиниция |
|----------------|---|
| K- 07 30 28 68 | Unloading valve |
| K- 07 30 28 78 | Motor protection relay (overcurrent relay) 10/16 A |
| K- 07 30 28 79 | Motor protection relay (overcurrent relay) 4/6,3 A |
| K- 07 30 28 77 | Motor protection relay (overcurrent relay) 6,3/10 A |
| K- 07 30 28 71 | Hood with On/Off-Switch |
| K- 07 30 28 75 | Diaphragm |