



Note

Repairs to pressure accumulators may only be carried out by qualified personnel! Please observe the repair instructions supplied.

Description

For IHV bladder accumulators

Consisting of replacement bladder, seal kit and split ring

Item			
Identification	for bladder accumulator	Replacement bladder	Weight _(kg)
HK IHV 1.0 REPKIT	HK IHV 1.0 ltr	Bladder 1.0 litre NBR, Ø22 mm 7/8"-14UNF	0,5
HK IHV 1.6 REPKIT	HK IHV 1,6 ltr	Bladder 1.6 litre NBR, Ø16 mm 5/8"-14UNF	0,6
HK IHV 2.5 REPKIT	HK IHV 2.5 ltr	Bladder 2.5 litre NBR, Ø22 mm 7/8"-14UNF	0,7
HK IHV 4.0 REPKIT	HK IHV 4.0 ltr	Bladder 4.0 litre NBR, Ø22 mm 7/8"-14UNF	1,0
HK IHV 5.0 REPKIT	HK IHV 5.0 ltr	Bladder 5.0 litre NBR, Ø22 mm 7/8"-14UNF	1,2
HK IHV 6.0 REPKIT	HK IHV 6.0 ltr	Bladder 6.0 litre NBR, Ø22 mm 7/8"-14UNF	1,5
HK IHV 10.0 REPKIT	HK IHV 10.0 ltr	Bladder 10.0 litre NBR, Ø22 mm 7/8"-14UNF	1,5
HK IHV 10K2 REPKIT	HK IHV 10.0 ltr K2	Bladder 10.0 litre K2 NBR, Ø22 mm 7/8"-14UNF	1,7
HK IHV 12.0 REPKIT	HK IHV 12.0 ltr	Bladder 12.0 litre NBR, Ø22 mm 7/8"-14UNF	2,0
HK IHV 20.0 REPKIT	HK IHV 20.0 ltr	Bladder 20.0 litre NBR, Ø22 mm 7/8"-14UNF	2,3

Spare part for following products

HK IHV Bladder accumulator