


# HK KL EJ

Resistance thermometer for level/temperature switch

## Properties

<b>Design</b>	resistance thermometersr PT 100 (Tol. $\pm 0,8^{\circ}\text{C}$ )
<b>Operating voltage</b>	24 V DC
<b>Use</b>	for Level-Temperature Switches HK 64EJ

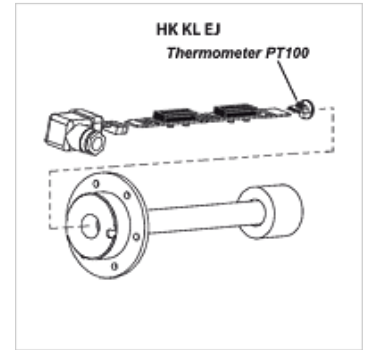

## Note

Installation and assembly must be carried out by qualified staff.

Level contacts or temperature sensors must be connected to the contact plate clean and free of oil.

For the proper function of the temperature sensors it is important that they have contact to the bottom of the dip tube without air gap. Make sure that the contact plate is inserted completely and fixed in the dip tube.

## Description

For mounting on contact strip of level-temperature switch HK64EJ

## Item

Identification	Weight (kg)
HK KL PT100 EJ	0,2

## Accessory for following products

HK 64EJ	Level/temperature switch HK 64EJ
---------	----------------------------------