



**Artikel**

Aanduiding	Definitie
K- 07 30 28 68	Unloading valve
K- 07 30 28 78	Motor protection relay (overcurrent relay) 10/16 A
K- 07 30 28 79	Motor protection relay (overcurrent relay) 4/6,3 A
K- 07 30 28 77	Motor protection relay (overcurrent relay) 6,3/10 A
K- 07 30 28 71	Hood with On/Off-Switch
K- 07 30 28 75	Diaphragm