
VOM WR
Pre-assembly sockets

HANSA-FLEX

Properties

Design	Pre-assembly sockets
Material	Hardened tool steel
Surface	phosphate treated



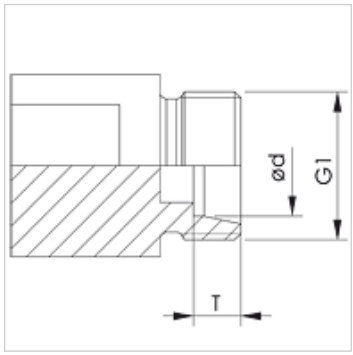

Note

The VOM WR is used for assembling the UEM WR

Item

Identification	Series	Ø d (mm)	G1	T (mm)
VOM NW 04 HL WR	L	6	M 12 x 1.5	7,0
VOM NW 06 HL WR	L	8	M 14 x 1.5	7,0
VOM NW 08 HL WR	L	10	M 16 x 1.5	7,0
VOM NW 10 HL WR	L	12	M 18 x 1.5	7,0
VOM NW 13 HL WR	L	15	M 22 x 1.5	7,0
VOM NW 16 HL WR	L	18	M 26 x 1.5	7,5
VOM NW 20 HL WR	L	22	M 30 x 2	7,5
VOM NW 25 HL WR	L	28	M 36 x 2	7,5
VOM NW 32 HL WR	L	35	M 45 x 2	10,5
VOM NW 40 HL WR	L	42	M 52 x 2	11,0
VOM NW 03 HS WR	S	6	M 14 x 1.5	7,0
VOM NW 04 HS WR	S	8	M 16 x 1.5	7,0
VOM NW 06 HS WR	S	10	M 18 x 1.5	7,5
VOM NW 08 HS WR	S	12	M 20 x 1.5	7,5
VOM NW 13 HS WR	S	16	M 24 x 1.5	8,5
VOM NW 16 HS WR	S	20	M 30 x 2	10,5
VOM NW 20 HS WR	S	25	M 36 x 2	12,0
VOM NW 25 HS WR	S	30	M 42 x 2	13,5
VOM NW 32 HS WR	S	38	M 52 x 2	16,0

Series: LL = Very light L = Light S = Heavy

Accessory for following products

UEM FM WR	WALRING union nut

Despite careful checking, we cannot guarantee the accuracy of all information included on this site, and we accept no liability.