


# 4 BKR L

## 4-way ball valve

### Properties

<b>Connection 1 - 4</b>	BSP cylindrical internal threads
<b>Sealing form 1 - 4</b>	for screw-in pins with shapes A, B and if necessary E
<b>Bore</b>	L shaped and strain relief hole
<b>Contact travel</b>	0°; 45°; 90°
<b>Temp. min.</b>	-10 °C
<b>Temp. max.</b>	80 °C
<b>Material</b>	Steel housing, ball and operating shaft POM ball seal NBR O-ring
<b>Surface</b>	burnished

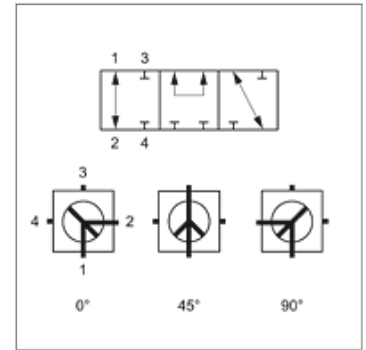

### Note

Please refer to the operating instructions for ball valves.  
Note the permissible pressure limits for the connecting elements.

### Item

Identification	DN*	Connecting thread	Overlap	LW (mm)	Operating pressure	AF (mm)	SF*
4 BKR 04 L	4	G 1/8" -28	negative (open)	5,0	PN 500	12	1,5
4 BKR 06 L	6	G 1/4" -19	negative (open)	6,0	PN 500	12	1,5
4 BKR 10 L	10	G 3/8" -19	negative (open)	9,0	PN 500	14	1,5
4 BKR 13 L	12	G 1/2" -14	negative (open)	12,5	PN 400	14	1,5
4 BKR 20 L	19	G 3/4" -14	negative (open)	19,0	PN 400	17	1,5
4 BKR 25 L	25	G 1" -11	negative (open)	24,0	PN 350	17	1,5
4 BKR 32 L	31	G 1.1/4" -11	negative (open)	24,0	PN 350	17	1,5
4 BKR 40 L	38	G 1.1/2" -11	negative (open)	36,0	PN 63	22	1,5

DN = Nominal diameter, nominal width – LW = Clearance – PN = Nominal pressure – PB = Max. operating pressure – AF = Width across flats – SF = Safety factor

### Spare parts

<b>BK ANSCHLAG</b>	Stop washers for ball valve
<b>BK GEKR GRIFF SW</b>	Handle (offset) for ball valve